

SoyPrint/Biobased Density Setting Advisory

Thanks for helping us introduce Sustainable Printing through SoyPrint/Biobased toner cartridges. As we pioneer together with this new technology, we've learned the SoyPrint/Biobased HP P2015, HP 2300, HP 4200, & HP 4250/4350 compatible cartridge may require an increase in the printer's density setting to enable the same dark print you have experienced with the HP brand cartridge. As the technology advances and this change is no longer needed, we will advise.

For agencies who are experiencing more smearing and toner dust the density setting might need to be changed to a lighter setting. Follow the steps listed below for adjusting the setting.

Because most SoyPrint/Biobased cartridges produce more pages than HP's version, this density setting change will not drop the page yield below HP's actual yield.

Thanks for your support and cooperation...and for printing "green".

How to Adjust HP 2015 Density Settings

Density options: 1 (lightest) – 5 (darkest) with 3 being the Default Setting

To change settings, the "HP TOOLBOXFX" must be installed on your computer when the printer is installed.

1. Open "HP TOOLBOXFX"
2. Under "Device" (top left hand box), select the "P2015" printer form the list
3. Select "Device Settings"
4. Select "Print Quality"
5. In the box to the right, select "Set Print Density" and arrow down to "5"
6. In the bottom right hand corner of this box, click on "Apply" to save the new Density setting
7. Exit "HPTOOLBOXFX"

How to Adjust HP 2300 Density Settings

Density options: 1 (lightest) – 5 (darkest) with 3 being the Default Setting

To change settings

1. Press **“Check Mark”** once
2. Arrow down to **“Configure Device”**
3. Press **“Check Mark”** once
4. Arrow down to **“Print Quality”**
5. Press **“Check Mark”** once
6. Arrow down to **“Toner Density”**
7. Press **“Check Mark”** once
8. Arrow down to **“4”** or **“5”** to increase density setting
9. Press **“Check Mark”** once

Printer will go back to **“Ready”** in about 15 seconds.

Or

Press **“Pause/Resume”** to immediately return to **“Ready”**

How to Adjust HP 4200 Density Settings

Density options: 1 (lightest) – 5 (darkest) with 3 being the Default Setting

To change settings

1. Press **“Check Mark”** once
2. Arrow down to **“Configure Device”**
3. Press **“Check Mark”** once
4. Arrow down to **“Print Quality”**
5. Press **“Check Mark”** once
6. Arrow down to **“Toner Density”**
7. Press **“Check Mark”** once
8. Arrow down to **“4”** or **“5”** to increase density setting
9. Press **“Check Mark”** once

SoyPrint Density Setting Advisory

Printer will go back to **“Ready”** in about 15 seconds.

Or

Press **“Pause/Resume”** to immediately return to **“Ready”**

How to Adjust HP 4250/4350 Density Settings

Density options: 1 (lightest) – 5 (**darkest**) with 3 being the Default Setting

To change settings

1. Press **“Check Mark”** once
2. Arrow down to **“Configure Device”**
3. Press **“Check Mark”** once
4. Arrow down to **“Print Quality”**
5. Press **“Check Mark”** once
6. Arrow down to **“Toner Density”**
7. Press **“Check Mark”** once
8. Arrow down to **“4”** or **“5”** to increase density setting
9. Press **“Check Mark”** once

Printer will go back to **“Ready”** in about 15 seconds.

Or

Press **“Menu Button”** to immediately return to **“Ready”**

